

PURE

Move 400D



Warranty information

Imagination Technologies Ltd. warrants to the end user that this product will be free from defects in materials and workmanship in the course of normal use for a period of two years from the date of purchase. This guarantee covers breakdowns due to manufacturing or design faults; it does not apply in cases such as accidental damage, however caused, wear and tear, negligence, adjustment, modification or repair not authorised by us. Should you have a problem with your unit please contact your supplier or contact Pure Support at <http://support.pure.com>.

Disclaimer

Imagination Technologies Limited makes no representation or warranties with respect to the content of this document and specifically disclaims any implied warranties of merchantability or fitness for any particular purpose. Further, Imagination Technologies Limited reserves the right to revise this publication and to make changes in it from time to time without obligation of Imagination Technologies Limited to notify any person or organization of such revisions or changes.

Trademarks

Move 400D, Pure, the Pure logo, Imagination Technologies, and the Imagination Technologies logo are trademarks or registered trademarks of Imagination Technologies Limited.

Copyright

Copyright © 2012 Imagination Technologies Limited. All rights reserved. No part of this publication may be copied or distributed, transmitted, transcribed, stored in a retrieval system, or translated into any human or computer language, in any form or by any means, electronic, mechanical, magnetic, manual or otherwise, or disclosed to third parties without the express written permission of Imagination Technologies Limited. Version 1 June 2012.




Disposal of Waste Electrical & Electronic Equipment

This symbol on the product or on its packaging indicates that this product should not be treated as household waste. Instead it should be handed over to a suitable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. The recycling of materials will help to conserve natural resources. For more detailed information about recycling of this product, please contact your local council office, your household waste disposal service or the shop where you purchased the product.

Move

400D

Thank you for choosing Move 400D. This manual will help you get your product up and running in no time and explains how to get the best out of all its great features. If you need any further assistance, please visit the support pages on our website at www.pure.com.

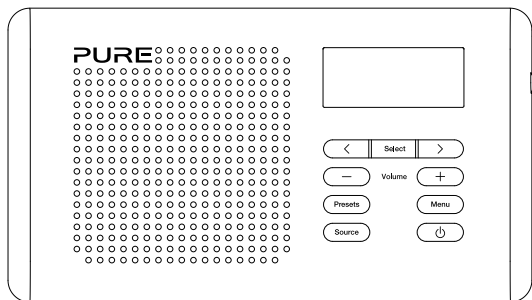

Safety information



Keep the unit away from heat sources such as radiators, heaters or other appliances that produce heat.

Do not expose the unit to direct sunlight.

Do not use the unit near water.

Avoid objects or liquids getting into the unit.

Do not remove screws from or open the unit casing.

Fit the mains adaptor to an easily accessible socket, located near the radio and ONLY use the mains power adapter supplied.

Should not be immersed in water, used in shower or bathroom if plugged into the mains.



Damage to hearing can occur with consistent exposure to high volume when using headphones. Always check the volume level before inserting headphones into your ears.

Use of headphones while operating a vehicle is not recommended and is illegal in some areas. Stop listening to your Move if you find it distracting while operating any type of vehicle or performing any other activity that requires your full attention.



Warning: Danger of explosion if battery is incorrectly replaced.

Replace only with a genuine Pure internal Li-ion rechargeable battery. Battery replacement should only be carried out by Pure or authorised representatives.

To replace the battery pack, contact your local dealer or visit the Pure technical support site at support.pure.com.

Dispose of the battery as per normal Lithium ion rechargeable batteries according to the local laws and regulations of your region. Some batteries may be accepted for disposal at your local recycling centre.

Do not tear or remove the plastic covering or any part of the battery.

Do not puncture, modify, drop, throw, or cause other unnecessary shocks to the battery. Batteries may present a risk of fire, explosion, or chemical burn if mistreated.

Do not dispose of the battery in a fire or incinerator, or leave in hot places such as a motor car under direct sunlight. Do not store batteries near an oven, stove, or other heat source.

Do not connect the battery directly to an electrical source, such as a building outlet or automobile power-point. Do not place batteries into a microwave oven, or into any other high-pressure container.

Do not immerse the battery in water or otherwise get it wet.

Do not short circuit the battery.

Contents

4 Product Overview

4 Controls

5 Getting started

6 Listening to digital radio

6 Listening to FM radio

7 Using radio presets

8 Settings

8 Language

8 Factory reset

8 Version

8 Update

9 Using the alarm

10 Pausing and controlling scrolling text

11 FM stereo option

11 Autotune

11 Audio settings

12 Display settings

12 Using the sleep timer

13 Clock settings

13 Setting the time and date

14 Changing the time format

14 Changing the date format

14 Clock synchronisation options


15 Help

15 Hints and tips

16 Technical specifications


17 Pure Warranty Statement for Australia

Overview diagrams

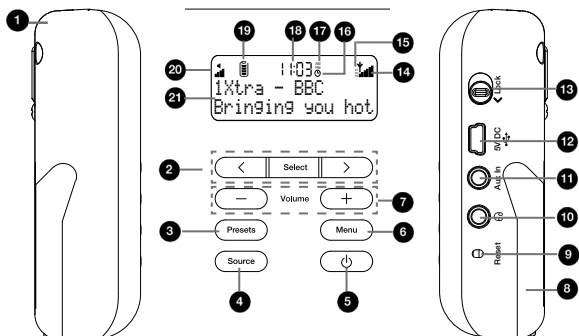

1. Loop for wrist strap
2. Browse and select radio stations. Select and adjust menu options
3. Store and select preset stations
4. Switch between digital and FM radio
5. On/standby switch (mains powered) or on/off switch (battery powered)
6. Enter/exit options menu
7. Adjust the volume
8. Unclip to stand unit upright
9. In case of problems, push with a pen or similar to reset the power
10. 3.5 mm stereo headphone socket
11. 3.5 mm analogue stereo input
12. Mini-B type USB connector for power/software updates
13. Slide to lock the buttons to prevent accidental use
14. Signal strength
15. Stereo, Digital and FM indicator
16. Alarm set indicator
17. AM/PM indicator
18. Current time
19. Battery charge level indicator
20. Volume/mute indicator
21. Displays menus, settings and station information

Getting started

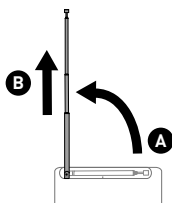

Position aerial

Unclip the telescopic aerial and fully extend it (steps **A** and **B**).


Note: Check that the Lock switch is set to the unlock position.

Move 400D

Connect power and switch on

Attach the power adapter and plug into your power supply and press  Standby to switch Move 400D on. The first time you plug your Move into a mains power supply it should automatically switch on and start an autotune, see below.

When charging Move for the first time or after an extended period of inactivity it is recommended that your unit is charged for around 24 hours to ensure full battery power.




Select language

1. Use the scroll < > buttons to view the different language options.
2. Press **Select** to choose the language shown.




Autotune

Move will perform an autotune for digital stations and tune to a station when complete. The number of stations found is displayed during an autotune.




Listening to digital radio



Tuning


1. Press **Source** until 'Digital radio' is displayed on the screen.
2. Scroll < > through the stations and press **Select** to change station.

Listening to FM radio



Tuning

Press **Source** until 'FM' is displayed on the screen to show the FM tuning screen and use one of the following methods to find the station you want:



Seek tune

Hold down either the scroll left or scroll right buttons < > until Move starts to automatically scan for the next station. The scan will stop when a station with a strong signal is found

Manual tune

Scroll < > to the required frequency.

Using radio presets

Store up to 10 digital and 10 FM radio stations for quick access.



Storing a radio preset

1. Tune into the station that you want to store.
2. Press **Presets** so that the < > symbols are shown on the display.
3. Scroll < > to the required Preset (1-10).
4. Hold down **Select** to save the current station as a preset. You can save over existing presets.




Selecting a radio preset

1. Press the **Presets** button.
2. Scroll < > to the station that you want to listen to.
3. Press **Select** to tune into the station.




Settings

Press **Menu**, scroll < > to **Settings** and choose a setting to adjust:




Language

Select a menu language from **English**, **French**, **German** or **Italian**.




Factory reset

Select **Yes** to remove all presets and reset all alarm and clock settings.



Version

Displays the current software version.



Update

Contact Pure technical support (<http://support.pure.com>) for more information on how to update Move 400D to the latest software version.

Using the alarm

The alarm in Move switches the radio on (if in standby) and tunes to a digital or FM radio station or sounds a tone.

Setting an alarm

1. Press **Menu**.
2. Scroll **< >** to 'Alarm' and press **Select**.



3. Scroll **< >** to 'On' and press **Select**.
4. Scroll **< >** to set the hour for the alarm and press **Select**. Repeat to set the minute for the alarm.
5. Scroll **< >** to specify one of the following alarm repeat options: 'Daily', 'Weekdays', 'Weekends' or 'Once' and press **Select** to confirm.
6. Scroll **< >** to specify 'FM', 'Digital radio', or 'Tone' and press **Select** to confirm. If you are specifying a tone alarm, skip to step 9.
7. Scroll **< >** to specify which station should be played when the alarm goes off. You have the option of selecting one of your preset stations or you can select 'Last Used' to select the station that you were last listening to. Press **Select** to confirm.
8. Use **Volume + / -** or **< >** to set the volume that the radio will play at when the alarm sounds and press **Select** to confirm.
9. The alarm icon will appear on the display to show that the alarm is set.




Disabling an alarm

1. Press **Menu**.
2. Scroll < > to 'Alarm' and press **Select**.
3. Scroll < > to 'Off' and press **Select**.
4. The alarm icon on the display will disappear.

Cancelling a sounding alarm

To cancel a sounding alarm, press any button except the volume buttons.

Pausing and controlling scrolling text




1. When 'Scrolling text' information is displayed in either digital or FM radio, press **Select** to pause the scrolling text.
2. Press the scroll buttons < > to move the text to the left or right.
3. Press **Select** to exit.

FM stereo option

You can choose between 'Stereo' or 'Mono' reception when listening to FM radio. Mono may improve weaker reception.

Note: The FM stereo option is only visible when you have selected 'FM' as the radio source.



To change between Stereo or Mono reception:

1. Press **Menu**.
2. Scroll < > to 'FM stereo' and press **Select**.
3. Scroll < > and **Select** to choose between 'Stereo' or 'Mono' FM reception.

Autotune

You can use the autotune function to automatically scan for new digital radio stations and remove inactive ones.


Note: Autotune is only visible when you have selected 'Digital' as the radio source.



To carry out an autotune:

1. Press **Menu**.
2. Scroll < > to 'Autotune' and press **Select**.

Audio settings




To adjust the bass and treble settings:

1. Press **Menu**.
2. Scroll < > to 'Audio' and press **Select**.
3. Scroll < > to 'Bass' or 'Treble' and press **Select**.
4. Scroll < > to set the level from -6 (low) to 6 (high) and press **Select**.


Display settings

Press **Menu**, scroll to 'Display' and use the **Select** button to choose one of the following options:



Backlight

Adjust how long the display backlight stays on. Choose from **Always on**, **Timed off** (after 7 seconds) or **Off**.



Information

(Digital radio only)

Choose the information shown on the display.


Scrolling text: Provided by the broadcaster.

Signal strength: The clear block indicates reliable reception level.

Signal quality: From 0 (low) to 100 (high).



Using the sleep timer

The sleep timer can be set to switch Move off after a period of time.



1. Press **Menu**.
2. Scroll < > to 'Sleep timer' and press **Select**.
3. Scroll < > and press **Select** to set the timer for up to 90 minutes or choose **Sleep off** to cancel.

Clock settings




Setting the time and date

The time and date on Move are automatically set by the FM or digital radio signal. If the time/date does not update automatically, you can manually set it using this option.

Note: Any time or date updates received by an FM or a digital broadcast will override manual settings, if clock synchronisation is enabled (see the following page for more information).


To set the time/date manually:

1. Press **Menu**.
2. Scroll < > to 'Clock' and press **Select**.
3. Scroll < > to 'Set Time/Date' and press **Select**.
4. Scroll < > to set the hour and press **Select**. Repeat to adjust the minutes.
5. Scroll < > to set the day of the month and press **Select**. Repeat to set the month and year.




Changing the time format

1. Press **Menu**.
2. Scroll < > to 'Clock' and press **Select**.
3. Scroll < > to 'Time (12h/24h)' and press **Select**. Repeat to set the required time format.



Changing the date format

1. Press **Menu**.
2. Scroll < > to 'Clock' and press **Select**.
3. Scroll < > to 'Set date format' and press **Select**. Repeat to set the required date format.



Clock synchronisation options

You can select the radio sources that you want to use for setting the time. By default, Move 400D uses both the FM and digital radio signals to synchronise the time.

To specify the synchronisation options:

1. Press **Menu**.
2. Scroll < > to 'Clock' and press **Select**.
3. Scroll < > to 'Clock synch' and press **Select**.
4. Scroll < > to the required clock synchronisation option and press **Select**.

Help

Hints and tips

The current value for most settings is indicated on the display by an asterisk (*).

Display says 'No stations available'

Check that your aerial (or headphones cable) is fully extended. Use Autotune to search for stations. Try adjusting your aerial or radio position.

(<</>>) Secondary digital radio services

Secondary services accompany some stations, providing extra information or alternative content and may only be broadcast at certain times. If a station has secondary services available, the station shows '>>' next to its name in the station list and the secondary service appears next to the station in the list. A secondary service has a '<<' before its name in the station list.

(?) Inactive or unavailable digital radio stations

Inactive or unavailable stations are those which appear on the station list but are not currently available because either you are outside the broadcast area, have lost reception or the station is not currently broadcasting. Unavailable stations have a '?' before their name on the station list. If you select a station which has this symbol, your radio tries to tune in or returns to the previous station.

Battery power indicator is flashing

This may happen if there is a problem charging your battery. Check the connections to your power supply. A replacement battery may be required if this does not solve the problem. To replace the battery pack, contact your local dealer or visit the Pure technical support site at <http://support.pure.com>.

Technical specifications

Radio	Digital and FM. DAB/DAB+/ DMB-Radio/FM depending on region.
Frequencies	Digital radio (Band III and L-Band) and FM (RDS) 87.5-108 MHz.
Speaker	50mm, 8 Ohm.
Input connectors	Micro USB for power supply and software upgrade. 3.5mm auxiliary input.
Output connectors	3.5mm stereo output for headphones.
LCD display	Orange backlit LCD display with 16 x 2 characters, function icons and clock.
Power supply	Internal Li-ion rechargeable battery (non removable) or 100-240V, 50/60Hz 5V DC 800 micro-USB mA external power adapter.
Temperature range	Charging only recommended in ambient temperatures of 0°C to +40°C maximum.
Dimensions	150mm (w) x 85mm (h) x 27mm (d).
Weight	300g
Approvals	 CE marked. Compliant with the EMC and Low Voltage Directives (2004/108/EC and 2006/95/EC). ETSI EN 300 401 compliant. Australian C-Tick N1600 and Electrical Safety.

Pure Warranty Statement for Australia

This statement replaces any reference to warranty which may be contained elsewhere within this manual.

What do you need to do now?

Option 1: You can register your purchase on-line at <https://www.pure.com/au/register/register.asp>

Option 2: Or you can do nothing other than keep your proof of purchase as evidence of your purchase date. This proof of purchase would need to be presented if warranty service was ever required.

If you have any questions about your warranty you can call us toll free: 1800 988 268

What's covered by this warranty?

- Pure agrees to refund, repair or replace, at your election, without charge to you, any part found to be defective during the warranty period.
- If equipment has been used according to its accompanying instruction manual and is used in a domestic situation, a two year warranty period applies (excludes rechargeable ChargePAK where fitted. A one year warranty period applies to all ChargePAKs).

How do you make your claim?

Call 1800 988 268 for instructions on how to return your Pure product for warranty service or go to: <http://support.pure.com/au/> and complete the contact us form.

What's NOT covered by this warranty?

Under this express warranty Pure will not be liable for loss or damage of any kind whatsoever, whether direct, indirect, incidental, consequential or otherwise.

- Replacement of parts due to normal wear and tear.
- Products with serial number defacement, modification or removal.
- Water damage or corrosion caused by dampness.
- Any damage or deterioration due to shipments.
- Any damage or deterioration due to shipment.
- Any product which has been subjected to misuse, abuse or accident.

Australian consumers — The benefits to the consumer given by this express warranty are in addition to other rights and remedies of the consumer under a law in relation to the goods or services to which this warranty relates. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law, You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Pure is distributed and supported in Australia by PIONEER ELECTRONICS AUSTRALIA PTY LTD, 5 ARCO LANE, HEATHERTON, VICTORIA, 3202.

PURE

www.pure.com

connect.pure.com

www.facebook.com/pure

Pure

Imagination Technologies Ltd
Home Park Estate
Kings Langley
Herts, WD4 8LZ
United Kingdom
<http://support.pure.com>

Pure Australasia Pty Ltd

PO Box 5049
Wonga Park
Victoria 3115
Australia
sales.au@pure.com
<http://support.pure.com/au>